




WTA 1860 Operation Manual



1. Setting Internal Clock

Note: The internal clock is based on a 24-hour clock and is set to the nearest hour.

- a. First, set outer black "Clock Dial" to the current hour.
- b. Then, install 2 "AA" alkaline batteries in the battery cartridge holder located in the bottom of the timer unit. "LOW BATT./SET CLOCK" indicator light comes on for 10 seconds. When "LOW BATT./ SET CLOCK" indicator light turns off the internal clock is set.
- c. To reset the internal clock remove the batteries for 1 minute and repeat the process above.

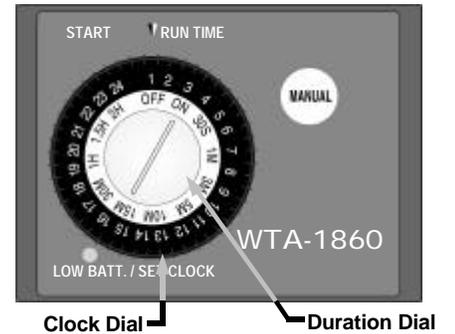

2. Setting and Changing Programs

- a. After having set the internal clock simply turn the black "Clock Dial" to the desired start time.

Note: "Clock Dial" is based on a 24-hour clock, and start times are set on the hour.

- b. Then, turn the inner "Duration Dial" to the desired length of time.
- c. To change start times or duration simply reset the dials.



3. Manual ON/OFF

- a. With the "Duration Dial" in the "On" position, unit will begin to water after 3 seconds and will water continuously until turned "Off."
- b. In the "Off" position the timer will not water.
- c. "MANUAL" button sets timer for a single manual watering.
- d. To water one time only, turn the "Duration Dial" to the desired length of time and press "Manual."
- e. Once manual watering is completed, return the "Duration Dial" to its original setting for automatic watering.



4. Low Battery Detection

- a. A flashing "LOW BATT./ SET CLOCK" light means that your batteries are running low.
- b. The indicator light will flash until batteries are replaced or completely used up.
- c. A rapidly flashing "LOW BATT./SET CLOCK" light means that your dials have been set improperly.
- d. Remove the batteries for 1 minute and reset the timer.

Rain Bird Sales, Inc.
 Customer Support Center
 6640 S. Bonney Ave.
 Tucson, AZ 85706
 1-800-RAIN BIRD
 (520) 434-6289 FAX
 ©1999 Rain Bird Sprinkler Mfg. Corp.