RAIN **BIRD**®

WTA-1875

ELECTRONIC WATER TIMER Owner's Manual

Please read this Owner's Manual completely before installing timer.



FIGURE 1: CONTROL PANEL


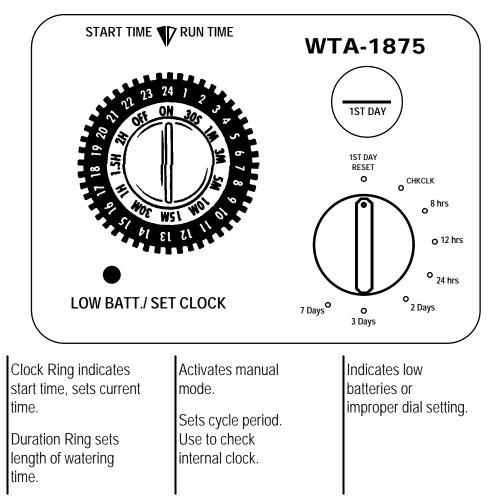


FIGURE 2: CONTROL PANEL DIALS

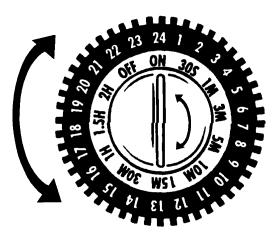

Black outer "Clock Ring" is marked for a 24-hour day. It indicates watering start time and will set current time when batteries are installed.

White inner dial, "Duration Ring" can set watering times from 30 seconds up to two hours.

White "Cycle Dial" is used to set the cycle period from every 8 hours up to 7 days. It also sets first day watering cycles.

STEP 1: BATTERY INSTALLATION AND CLOCK SETTING

Remove battery compartment and install two (2) "AA" alkaline batteries (not included) in the battery cartridge holder. Match markings (+/-). Insert battery holder into water timer.

Internal time clock resets to the hour on Clock Ring when batteries are removed and reinstalled.

NOTE: To prevent corrosion, remove batteries when timer is not in use for long time periods. Reset clock and programs when batteries ore removed for longer than one (1) minute.

STEP 2: INTERNAL CLOCK SETTING

Set 24-hour CLOCK RING to the current hour before reinstalling battery compartment. After batteries are installed, LOW BATT./SET CLOCK indicator lights up for 10 seconds. Internal clock is set to the time on the Clock Ring when the LOW BATT./SET CLOCK light goes out.

STEP 3: SETTING AND CHANGING PROGRAMS

Turn CLOCK RING to desired starting time. Turn DURATION RING to desired length of watering time (duration). Turn CYCLE DIAL to desired cycle period for watering.

To change the program, reset the rings and dials.

CYCLE OPTIONS

1st day reset	Refer to "Manual Watering"
Chkclk	Refer to "Check Clock Function"
8 hrs.	Every 8 hours
12 hrs.	Every 12 hours
24 hrs.	Every day
2 Days	Every other day
3 Days	Every third day
7 Days	Once a week

MANUAL WATERING

Unit waters continuously when Duration Ring is in ON position. Unit will not water when Duration Ring is OFF. Timer responds approximately two seconds after Duration Ring is set to On or OFF position.

MANUAL/1ST DAY BUTTON sets timer for manual watering or the first day in a cycle watering period.

To water one time only, turn DURATION RUNG to desired duration. Press MANUAL/ 1ST DAY.

To set the first day for cycle watering, turn CYCLE DIAL to 1ST DAY RESET. Press MANUAL/1ST DAY button once to set the first day of watering to today; twice for tomorrow; three times for the day after tomorrow. Turn CYCLE DIAL to cycle period (8 hours up to 7 days).

LED blinks when pressed. Maximum 1st Day reset is three days.

TO CHECK CLOCK FUNCTION

Turn CYCLE RING to CHKCLK. Turn CLOCK RING to the current hour. If internal clock matches the current hour, the LOW BATT./SET CLOCK light flashes.

LOW BATTERY DETECTION

Flashing LOW BATT./SET CLOCK light means: 1. Low batteries. Light flashes until batteries are completely used or replaced.

Or...

2. Light flashes faster if dials are improperly set.

RAIN **BIRD**

Rain Bird Sales, Inc. Customer Support Center 6640 S. Bonney Ave. Tucson, AZ 85706 1-800-RAIN-BIRD (520) 434-6289 FAX